

Updated Printing Interface

How to login and register a card

Users will need to register their ID cards to enable printing. This is a one-time only process.

- 1. Tap card against card reader.
- 2. If associating a new card, the card activation screen will appear.
- 3. Enter your network **Login** and Password by selecting the keyboard symbol then select **OK**.




- 4. Select Login and your card is now registered.
- 5. To LOG OUT Press ACCESS.

How to login without Card

1. Tap blank box in the **Username** field.




- 2. Enter your **Username** then select **OK**.
- 2. Enter **Username** and **Password** then select **OK**.
- 3. Press **Login** button on the display to login.

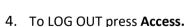




1. Tap card against card reader. 2. Select Login.

3. To LOG OUT press Access.

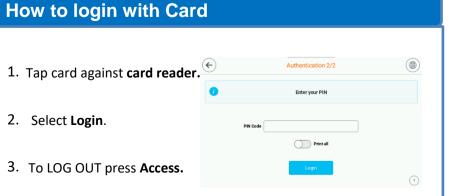

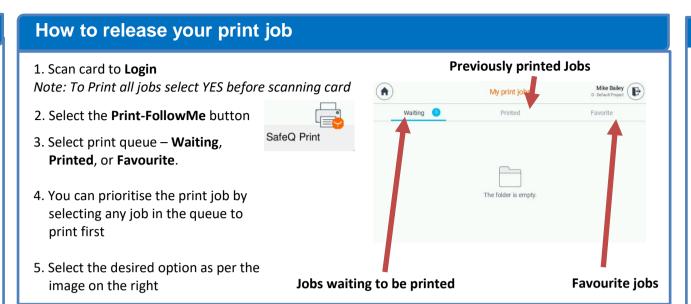




- 1. Scan card to Login
- 2. Select Copy




3. Select required Copy Settings on screen

How to Scan

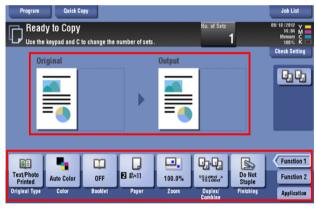

4. Load documents in tray face up or place documents on glass face down

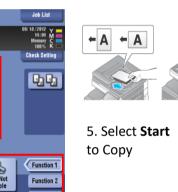

6. To LOG OUT Press **ACCESS**



Scanning - Adjust Scan Settings

How to cancel your print job

- 1. Scan card to Login
- 2. Select the **Print-FollowMe** button
- 3. Select individual print job/s to be deleted



SafeQ Print

~

Printing from mobile devices

- 1. Select email or document on your mobile device.
- 2. Forward the email attachment or document to the following email address: printing.east@nd.edu.au (for NSW)
- 3a. An **employee** can access the print job by logging in with their card or username & password.
- 3b. A guest will receive a confirmation email with a username
- 4. For entering the **username** and **password** in the login screen (see 'How to login without Card')
- 5. Select **Print-FollowMe**, select **Waiting**, highlight your job then select Print (see how to release your print job)

